

DEMA BLEND SAFE
MODEL: 662-639GAP& 662-639GAP-OH (ONE HAND FILL)
INSTALLATION INSTRUCTIONS

The Blend Safe II Dispensing System is a modular, locking dispensing system that allows the user to dispense chemicals safely and control dispenser inventory. It, also, has the flexibility to meet changing requirements at different accounts in the field.

1. PARTS CHECKLIST:

- | | |
|--|-------------------------|
| A. Blend Safe Assembly | E. Drip Tray |
| B. 1/4" ID x 32" Long Vinyl Supply Tubing and Foot Valve | F. Screw and Anchor Kit |
| C. Ceramic Weight | G. Label Card |
| D. Hose Hanger Assy. | H. Metering Tip Kit |
| | I. Cabinet Lock Keys |
| | J. Hinges |

2. INSTALLATION: (Refer to Figure 1) Note: All installations must conform to local plumbing codes and use approved backflow preventers. Pressure indicating tee is to be installed with existing faucets according to local plumbing codes in the state of Wisconsin and any other state that requires the use of a pressure indicating tee.

- A. **MOUNTING AND WATER SUPPLY:** Locate mounting holes on a permanent surface. Drill all of the holes into the drywall using a 1/4" diameter bit for use with the included #10 screw and anchor set. (If mounting the Blend Safe to wood and you do not plan to use the included anchors, drill 1/8" diameter holes.) Insert the anchors into drilled holes and hammer them into the wall until they are flush with face of wall. Assemble all of the #10 screws with a Phillips screwdriver into the anchors so the screw heads are sticking out of the wall approximately 1/2". Mount the Blend Safe by inserting the screw heads through the keyhole slots in the base and tighten the screws. The water inlet is equipped with a female garden hose fitting (with strainer washer) for attaching a water supply hose. The water inlet may be removed to permit direct connection to a 3/8" NPT pipe. The unit is designed so water can be supplied to either side by interchanging the pipe plug with the pipe and female hose fitting. **Note: Apply pipe dope, hand tighten, and then turn 1-1/2 times with a wrench. DO NOT OVER TIGHTEN.** WARNING: Do not use Teflon® tape to seal internal plastic threads as the extra thickness of the tape may cause the plastic to crack. Use a non-welding liquid sealant instead. The push button valves in the top of each station are connected using a hose barb and reinforced tubing. The bottoms of each station are connected to each other using box clips. Additional single-station units can be attached using DEMA kit #66-129. Kit #66-130 is used for attaching dual-station units to each other.
- B. **PRESSURE INDICATING TEE INSTALLATION:** Screw female quick disconnect to faucet and attach pressure indicating tee to female quick disconnect. Attach female end of reinforced hose to male threads of tee, then attach the male end to the female garden hose fitting at the water inlet of the Blend Safe (See Figure 4). Water supply should not exceed 125 psi and water temperature must not exceed 150°F.
- C. **CHEMICAL INJECTION ADJUSTMENT; WARNING: USE CARE WHEN HANDLING HAZARDOUS CHEMICALS.** Chemicals feed rates are controlled by metering tips screwed into the selector valve barbs and the 4 GPM proportioner inlet barb. Select a tip for each barb using Table 1 or 2 as a guide.

1 cps (centipoise) is equal to the viscosity of water 75 cps is approximately equal to the viscosity of 10 weight motor oil 200 cps is approximately equal to the viscosity of most dishwashing detergents
--

DEMA BLEND SAFE
MODEL: 662-639GAP& 662-639GAP-OH (ONE HAND FILL)
INSTALLATION INSTRUCTIONS

TABLE 1 - 1 GPM FLOW RATE PROPORTIONER, 1/4" I.D. TUBING

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Tan	1.03	125-1	0.76	168-1	0.38	333-1
Orange	1.24	103-1	0.98	130-1	0.53	241-1
Turquoise	1.43	89-1	1.07	119-1	0.61	211-1
Pink	2.47	52-1	1.58	81-1	0.92	139-1
Light Blue*	3.05	42-1	2.1	61-1	1.06	121-1
Brown	3.48	37-1	2.31	55-1	1.15	111-1
Red	4.38	29-1	2.83	45-1	1.23	104-1
White	5.33	24-1	3.1	42-1	1.37	93-1
Green	6.38	20-1	3.63	35-1	1.4	91-1
Blue	6.77	19-1	3.78	34-1	1.45	88-1
Yellow	9.90	13-1	5.1	25-1	1.48	86-1
Black	15.00	9-1	6.54	20-1	1.53	84-1
Purple	24.94	5-1	7.28	18-1	1.57	82-1
Gray	35.94	4-1	8.5	15-1	1.64	78-1
No Tip	73.21	2-1	9.35	14-1	1.87	69-1

TABLE 2 - 4 GPM FLOW RATE PROPORTIONER, 1/4" I.D. TUBING

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Tan	0.33	387-1	0.26	500-1	0.12	1090-1
Orange	0.42	307-1	0.32	430-1	0.17	735-1
Turquoise	0.51	251-1	0.34	382-1	0.19	676-1
Pink	0.78	165-1	0.56	230-1	0.3	422-1
Light Blue*	0.87	147-1	0.67	192-1	0.33	391-1
Brown	0.99	129-1	0.74	174-1	0.37	345-1
Red	1.37	93-1	0.91	141-1	0.44	289-1
White	1.52	84-1	1.04	123-1	0.48	264-1
Green	1.72	74-1	1.22	105-1	0.52	244-1
Blue	2.13	60-1	1.27	101-1	0.54	239-1
Yellow	3.05	42-1	1.71	75-1	0.56	229-1
Black	4.50	28-1	1.96	65-1	0.57	224-1
Purple	7.75	17-1	2.4	53-1	0.59	217-1
Gray	9.86	13-1	2.54	50-1	0.63	204-1
No Tip	19.63	7-1	3.16	40-1	0.67	190-1

NOTE: *Metering tip color was formerly clear. All induction rates are base on a water pressure of 40 psi. Leaner dilutions can be achieved by ordering DEMA ultra lean tip kit 100-15KU.

- D. **CHEMICAL SUPPLY:** Remove Blend Safe Top cover. Slip a ceramic weight over a chemical supply tube. Install the tubing by pushing tubing over a barb on the selector valve. Place the chemical container inside the case. Run the tubing through the holes in the back of the Blend Safe and insert the ends of the tubing with the foot valve and ceramic weight into the chemical container (See Figure 1). Repeat for each chemical supply tube on the selector. Install the chemical supply tubing for the 4 GPM proportioner by pushing the tubing over the barb located on the front of the proportioner. Insert the tubing, foot valve and ceramic weight; end first, into the appropriate chemical container. Gummed labels are provided for labeling the chemical's dial position with the corresponding chemical.

DEMA BLEND SAFE
MODEL: 662-639GAP& 662-639GAP-OH (ONE HAND FILL)
INSTALLATION INSTRUCTIONS

- E. **DRIP TRAY:** The Drip Tray is installed by simply inserting the tabs in the back of the tray into the slots in the door of the case. Push tray down to secure in place. Two-sided tape or Velcro (not included) may be used to secure drip tray to door.
- F. **OUTLET TUBING:** Attach one end of the ½” ID tubing to the proportioner outlet barb and run the other end through the hole located at the bottom of the case. Attach tubing hanger to end of tubing, to hang up when not in use.
NOTE: Do not force outlet tubing onto the larger barbs on the proportioner.

3. OPERATION:

The Blend Safe is now ready for use. Depressing a push button or lifting a bottle lever (select models only) will allow water to flow through the proportioner and mix a chemical water solution at the desired ratio. The buttons are spring loaded to prevent accidental overflow if unattended, but may be converted to locking buttons by cutting off the tab at the notch (See Figure 2). Pushing the button and turning it a 1/4 turn clockwise at the end of its travel allows the valve to lock on. This makes it unnecessary for the attendant to hold the button while filling large containers. Turning the button in a counterclockwise direction will release it, allowing the valve to shut off. **NOTE: Models with bottle lever do not allow push button to lock on.**

4. SERVICING: Caution: Turn off water supply before servicing.

A. Proportioner fails to draw chemical:

1. Pinch outlet tube to create back pressure, which will cause unit to prime. Then foot valve will keep the inlet tube primed.
2. Insufficient water supply pressure. 20 PSI is the minimum allowable.

B. Proportioner stops drawing chemical:

- 1) Inspect foot valve for dried chemical or dirt. Soak in hot water to clean.
- 2) Proportioner metering tip clogged with dried chemical. Remove tip and try injecting in hot water. If there is no suction, remove proportioner and soak in hot water to clear interior passages.
- 3) Inspect proportioner to ensure that there are no mineral deposit build-ups on the nozzle. If so, soak proportioner body in deliming solution. (Remove all parts attached to proportioner before soaking in deliming solution.) **Note: Use care when handling hazardous chemicals.**

- C. Valve Malfunction:** Check that the button moves freely in & out, bottle lever moves up and down freely (select models only) and that a "click" can be heard when the button is pushed and released, indicating that the magnet is activating the plunger properly. Remove cover. To inspect internal parts, unscrew magnet housing and carefully pull off the enclosing tube so as not to drop the plunger, kick-off spring, and spacer. Check for dirt or damage impeding plunger and kick-off spring movement. Inspect the diaphragm, making sure the two small pinholes (bleed holes) in the diaphragm convolution are clear to allow the valve to close.

Caution: When servicing unit, be sure that replacement parts have been installed according to the drawing.

NOTE: THE MAXIMUM TEMPERATURE ALLOWABLE IS 150° F (65° C). THE MAXIMUM PRESSURE ALLOWABLE IS 150 PSI (10 BAR).

DEMA BLEND SAFE

MODEL: 662-639GAP & 662-639GAP-OH (ONE HAND FILL)

INSTALLATION INSTRUCTIONS


Merchandise Returns

No Merchandise will be Returned for Credit Without DEMA'S Written Permission. Returned Merchandise Authorization Number is Required in Advance of Return.

Product Warranty

DEMA products are warranted against defective material and workmanship under normal use and service for one year from the date of manufacture. This limited warranty does not apply to any products that have a normal life shorter than one year or failure and damage caused by chemicals, corrosion, physical abuse, or misapplication. Rubber and synthetic rubber parts such as "O"-rings, diaphragms, PVC tubing, and gaskets are considered expendable and are not covered under warranty. This warranty is extended only to the original buyer of DEMA products. If products are altered or repaired without prior approval of DEMA, this warranty is void.

Defective units or parts should be returned to the factory with transportation prepaid. If inspection shows them to be defective, they will be repaired or replaced without charge, F.O.B. factory. DEMA assumes no liability for damages. Return merchandise authorization number must be granted in advance of returned units for repair or replacement (See "Merchandise Returns" above).

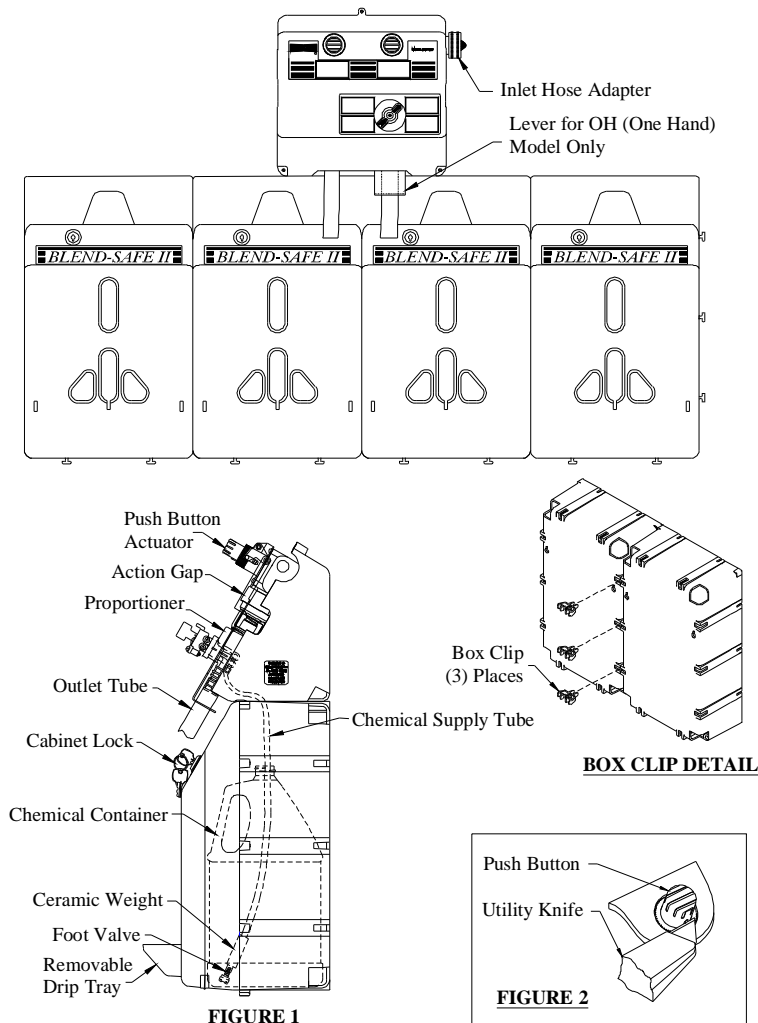

DEMA BLEND SAFE

MODEL: 662-639GAP & 662-639GAP-OH (ONE HAND FILL)

INSTALLATION INSTRUCTIONS

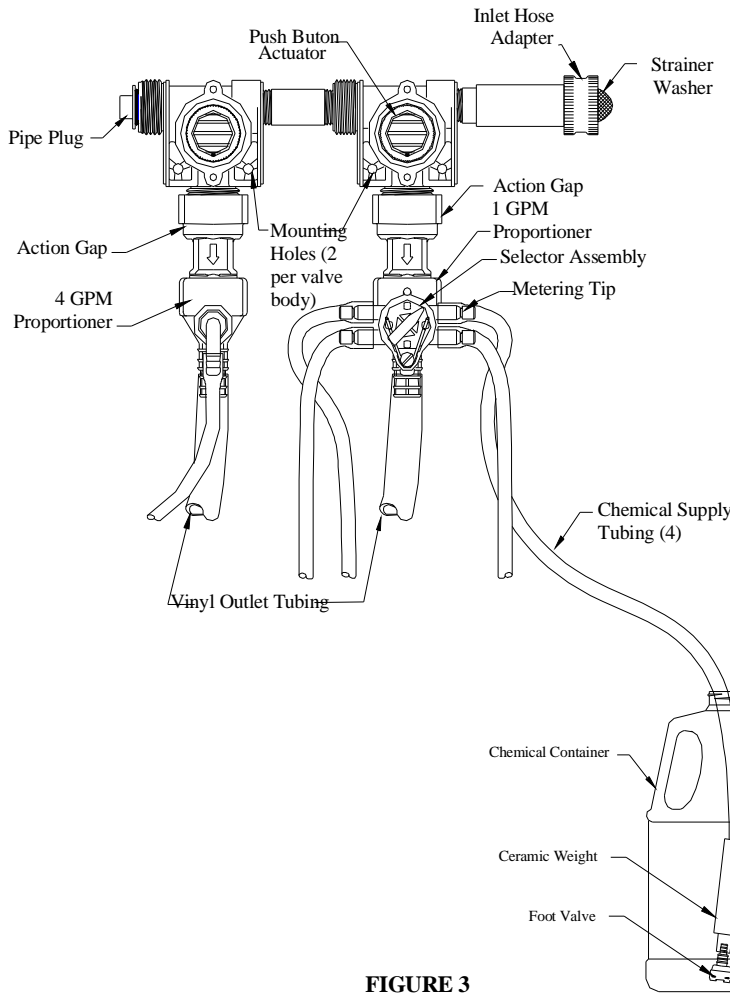


FIGURE 3

PRESSURE INDICATING TEE INSTALLATION


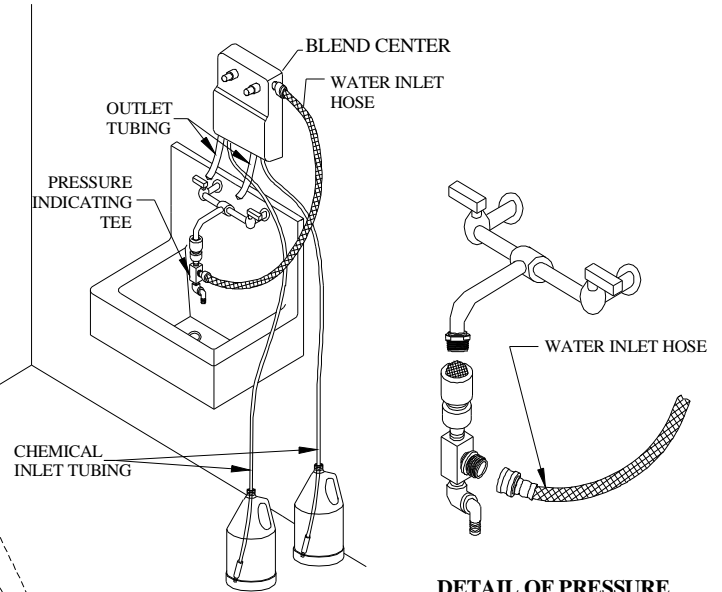


FIGURE 4

DEMA BLEND SAFE
MODEL: 662-639GAP & 662-639GAP-OH (ONE HAND FILL)
INSTALLATION INSTRUCTIONS

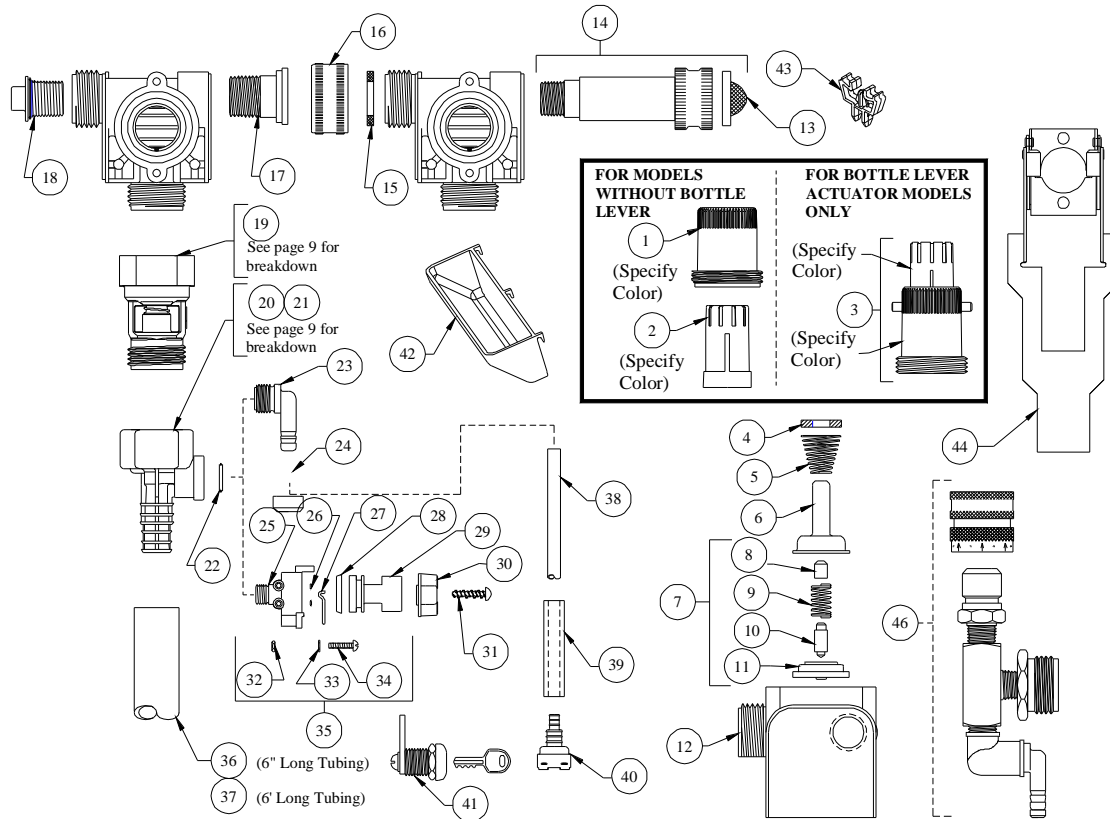


NO.	PART NO.	DESCRIPTION
1	66-199	Magnet Housing (Specify Color)
2	66-140	Push Button (Specify Color)
3	66-333-OH	Push Button Kit (Specify Color)
4	63-35	Magnet
5	63-36	Spring
6	41-7-25	Enclosing Spring
7	63-87	Valve Repair Kit
8	63-37	Spacer
9	41-1-8	Kick-off Spring
10	63-38	Plunger
11	41-15-10	Diaphragm
12	63-39	Valve Body
13	100-38	Strainer Washer
14	63-32-2	Water Inlet Adapter Kit
15	150-6	Rubber Washer
16	65-10	Garden Hose Thread Coupling
17	99-7-1	Hose Fitting Stem
18	66-153	Pipe Plug & O-Ring Assy.
19	16-30	Action Gap Assembly
20	61-22GAP-2	4 GPM (1/4" Barb) Proportioner (Gray)
21	61-99GAP-3	1 GPM Proportioner (Green) Less Inlet Barb
22	63-78	O-Ring
23	63-79	Inlet Barb (1/4" Barb)
24	100-15K	Metering tip Kit (14 Sizes)
25	63-98	Selector Valve Body
26	25-77	O-Ring

NO.	PART NO.	DESCRIPTION
27	63-100	Retaining Spring
28	63-51	"U" Cup
29	63-101-2	Knob
30	63-111-2	Selector Knob
31	58-60	#6 Hi Lo Screw 1/2" Lg.
32	66-13	Nut
33	63-104	Washer
34	63-103	Screw
35	63-96-3	Selector Valve Assembly
36	16-3-6	1/2" ID X 6" Lg. Vinyl Outlet Tube (1GPM Only)
37	89-30-5	1/2" ID X 6' Lg. Vinyl Outlet Tubing Hanger Assy. (4GPM Only)
38	100-12-13	1/4" ID X 32" Lg. Vinyl Supply Tubing
39	61-107-2	Ceramic Weight
40	100-16E	Foot Valve
41	66-21	Cabinet Lock
42	66-64	Drip Tray
43	67-4-1	Box Clip
44	63-150	Bottle Lever (OH Models Only)

NO.	PART NO.	DESCRIPTION
46	68-6-QD2	Pressure Indicating Tee

DEMA BLEND SAFE
MODEL: 662-639GAP & 662-639GAP-OH (ONE HAND FILL)
INSTALLATION INSTRUCTIONS

PROPORTIONER AND ACTION GAP BREAKDOWN

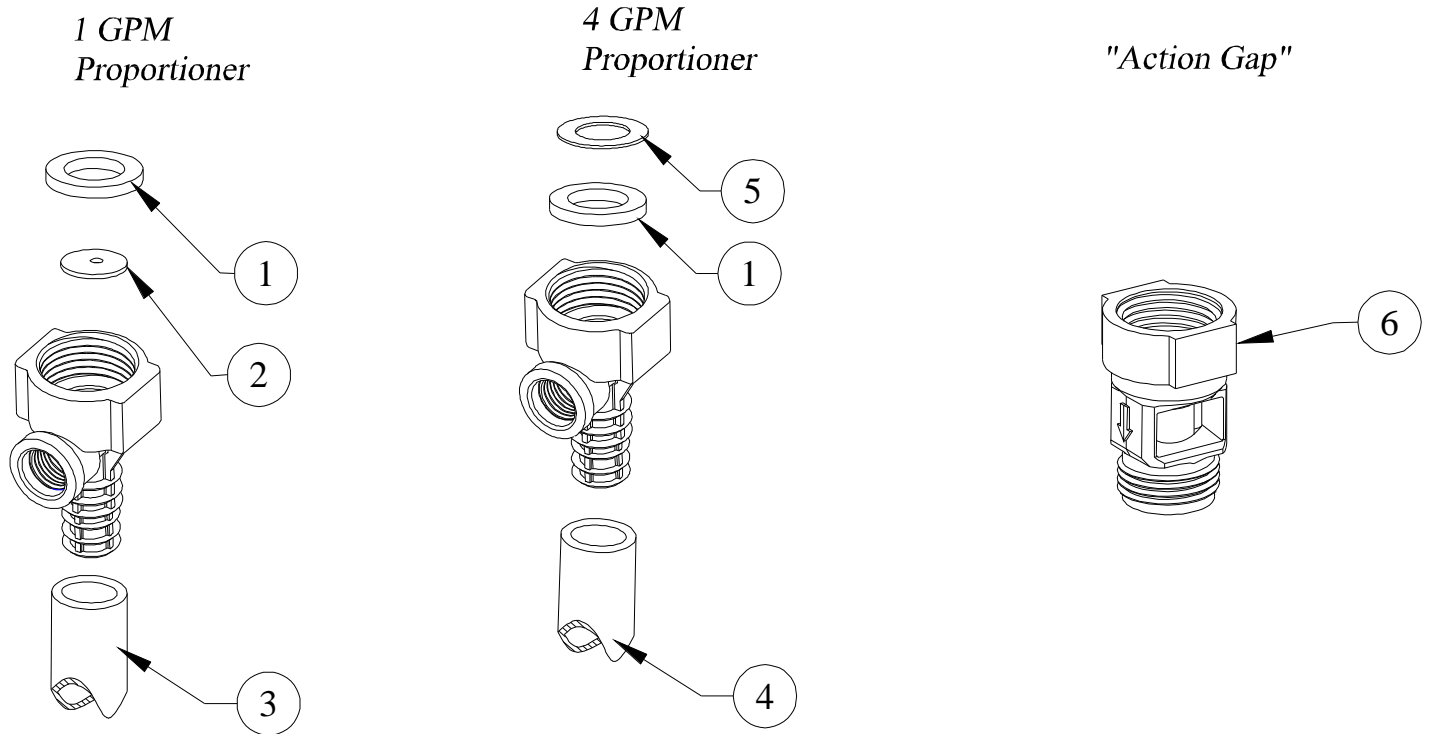

NO.	PART NO.	DESCRIPTION
1	150-6	Rubber Washer
2	61-36	Flow Disk
3	16-3-6	1/2" I.D. x 6" Lg. Vinyl Outlet Tube (1 GPM Only)
4	89-30-5	1/2" I.D. x 6' Lg. Hose Hanger Assy. (4 GPM Only)
5	63-89-1	Rubber Washer (1/32" Thick)
6	16-30	Action Gap Assembly